

삼성전자주식회사

94-1



애니콜 A/S 문의

전국 어디서나 **1588-7285**
(처리바로)

제품 모델명, 고장상태, 연락처를 정확히 알려 주시면 고객 여러분의
궁금증을 언제나 친절하게 상담 빠른 서비스를 제공합니다.

02-3451-3366

051-550-3366

0391-652-3366

0652-240-3366

053-430-3366

062-250-3366

042-480-3366

064-742-3366



고객상담실

02-541-3000, 080-022-3000

051-861-3000, 080-051-3000



PC통신

PC ()

GO SEC(, , , ,)



Internet

인터넷 홈페이지

<http://www.sec.co.kr>

<http://www.anycall.co.kr>



AS ? 가 가

GH68-01005A
2000/02.Rev.1.0



Anycall DiGiTAL



삼성애니콜디지털

SCH-A7600



Anycall Land
www.anycall.co.kr

사용설명서의 모든 내용은 애니콜 랜드의
'Manual Bank' 에서도 보실 수 있습니다.

 
가




각부의 명칭과 기능

버튼 사용 방법

메뉴	/	
이메일	/ n.TOP	(101)
확인	/	(75)
통화		
지움	/	
종료	/	
※	(20)	
0 인	(70)	
☐ # ▶	(64)	
☎	(12)	
음량	/ (40)	
▶/B	(45)	

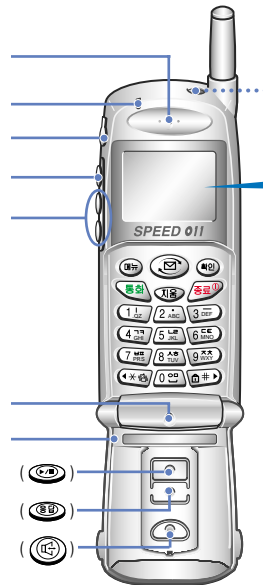

화면 표시부

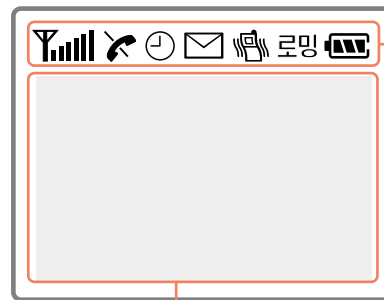 

📶	
☎	가
☎	가 가
🕒	
✉	
📶	
로밍	
🔋	🔋 🔋 🔋



차례

기 본 편

	5	21
	6	24
	7	
		28
/	9	/ 가/ 29
	10	31
	11	
/	12	33
	13	36
/	14	
가	15	37
	16	() 38
	17	38
	18	
	19	
	20	

응 용 편

	40	
	41	() 69
	42	70
	43	71
	44	72
/	45	73
		75
		76
	47	
	51	
	53	79
	54	79
	55	80
	58	80
D-DAY	59	81
	61	81
		82
	63	
		/ 84
()	64	85
	65	() 86
	67	87
		88








부 록


가	91
n.TOP ()	101
	105
	107
	109
	111
PC	가 113
700	/ 가 114
	115
?	117
	119
	123
	124
	125
가	125
	126
	128
(for Foreigner)	130



     구성품 확인

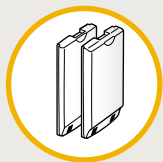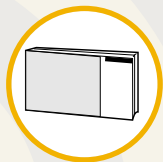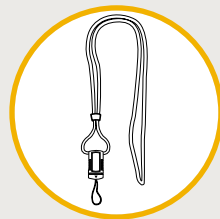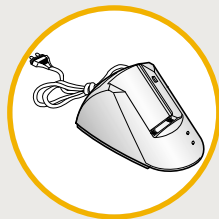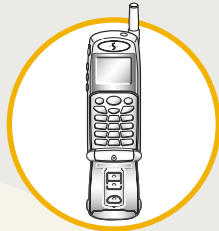

휴대용 곁이 / 휴대용 목 곁이를 연결하려면

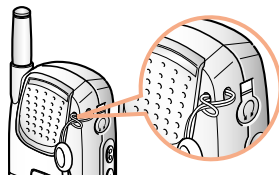 


배터리를 끼우려면

2가 가


1

 가

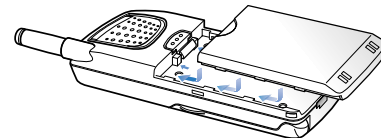


2

 가

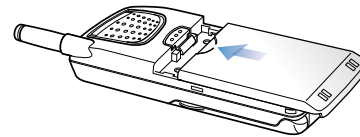

배터리를 빼려면

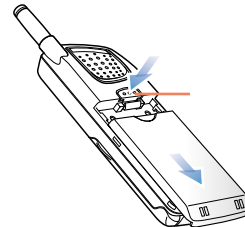 



배터리를 충전하려면

휴대폰에 배터리를 부착한 경우

 
휴대폰 배터리 표시등

여분 배터리 표시등

배터리만 충전할 경우

전원 연결

110V (110V) 220V

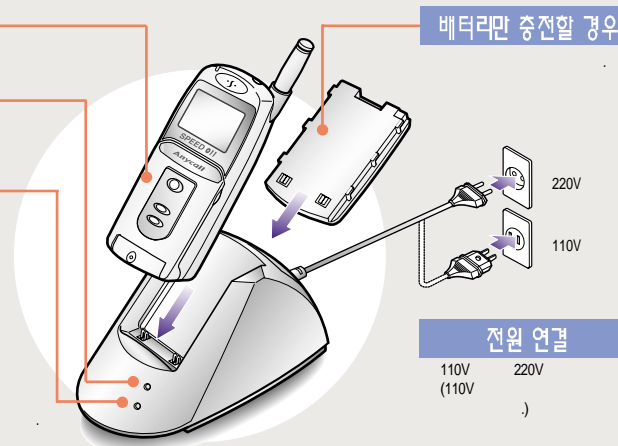

기본 기능편



알아두세요!

가

가



휴대폰을 켜려면 / 끄려면

휴대폰을 켜려면

종료①

가

가



휴대폰을 끄려면

 
종료①

가




전화를 걸려면

1

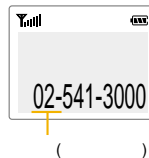


2

 

통화가 끝나면

 종료①



백인

(21~23)

종료①



가
(000~199) 3



전화를 받으려면

1 가

 


2



통화가 끝나면

종료①



스피커폰으로 전화 걸고/받기

(가)

 
스피커폰으로 전화 걸기

1 가



30

2




3 가

종료①

스피커폰으로 전화 받기

1

 2 가







일반 통화중에 스피커폰으로 통화하려면

가

 스피커폰 기능을 설정하려면



스피커폰 기능을 해제하려면

 

스피커폰 통화를 끝내려면

 


가
가



벨이나 진동/램프를 선택하려면

가

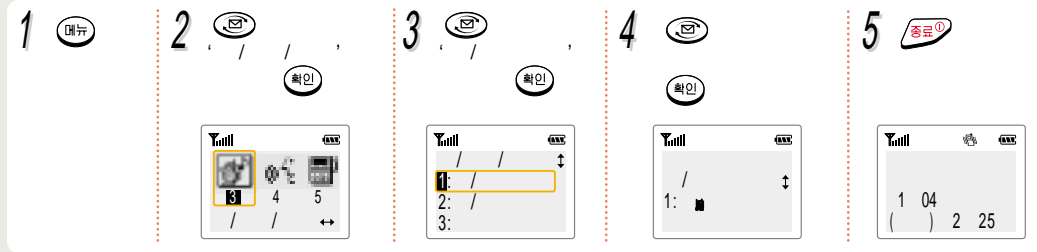

1: : 가
2: :
3: (): 가
4: : 3 가
5: (): 가
6: (): 가



여러 가지 벨소리를 선택하려면

10 10
2 PC , 700
2
3 (113) . (114)

- 1 메뉴
- 2 , / , , 확인
- 3 , / , 확인
- 4 , / , 확인
- 5 , / , 확인

3 DEF

2 ABC

종료

: 1~10
: 1~10
: 1, 2
: 1, 2
3



멜로디를 녹음하려면

가
2

- 1 메뉴
- 2 , / , , 확인
- 3 , / , 확인
- 4 , / , 확인
- 5 종료 확인

3 DEF

 
7 HIG

11 GZ

20



녹음된 멜로디를 들으려면

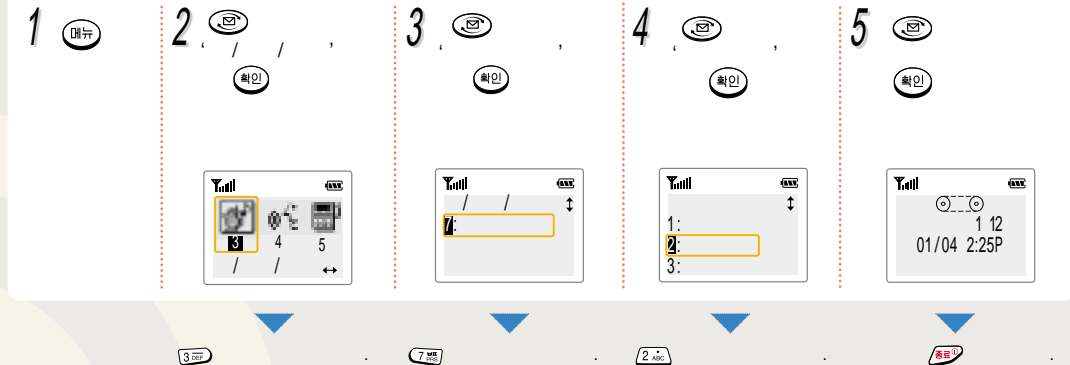

3 DEF

7 PRS

 
2 ABC

종료



녹음된 멜로디를 지우려면

녹음된 멜로디를 하나씩 지우려면

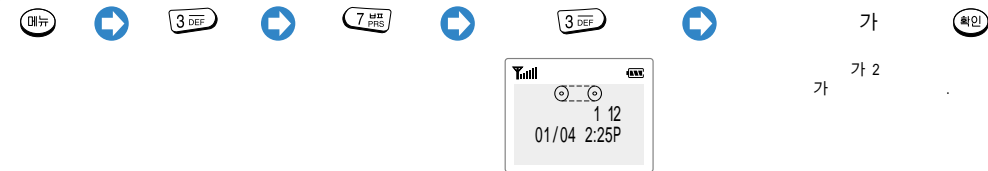

녹음된 멜로디를 모두 지우려면



 


소리 크기를 조절하려면

전화벨 소리조절



버튼을 누를 때 나는 소리조절



통화중 들리는 소리조절



통화중 상대방에게 들리는 소리조절



 
 
☎ : , ☎ : 가

스피커폰 통화중에 들리는 소리 조절




매너 기능

가

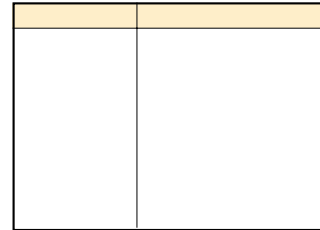

해제하려면

 



전화번호를 저장하려면

.(000 ~ 199) (4 . 200)

50

.

(66)



1

?

가

(38)

29

31

1

2

3

4

5

6

7

그룹으로 지정 안하고 저장하려면

그룹으로 저장하려면



 
전화번호를 저장하려면 (계속)

간단한 전화번호 저장방법

1



2

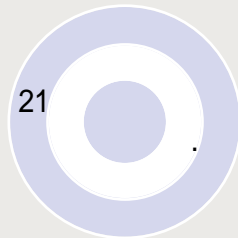

문자를 입력하려면

(, . , -)

문자입력은 문자입력 상태에서!

?

가

가

D-DAY

D-DAY

D-DAY

가

n.TOP

(21)

(29)

(31)

(34)

(47)

(49)

(51)

(52)

(59)

(60)

(71)

(97)

(101)



문자를 입력하려면 (계속)

(24) 가 .

한글 입력 방법

☞*☎ / ☎#☞

지움

가

) 5 L JI ' L ' ' ㄹ '

, 1 1 2 3

) 1 2 (2

) ㅏ (ㅑ) + 1 2 H (H)

3 2 (2

) ㅓ (ㅕ) + 1 2 ㅗ

, ☞*☎ / ☎#☞

, 0 ㄹ

(: ㅓ, ㅕ, ㅗ)

) ㅓ ' , 8 ㅓ



한번 따라해보세요!

0 ㄹ 2 ABC 1 2 1 2 7 H 3 DEF 6 EE 1 2

○

○

ㅓ

ㅑ

영문 입력 방법

☞*☎ / ☎#☞

지움

메뉴

☎

▲ / ▼

()

()

확인

가

) 2 ABC A B C a b c가

, DE ' D ' , 3 ' E ' 3

, ☞*☎ / ☎#☞

, 0 ㄹ



한번 따라해보세요!

 
' HIT '

(24)

메뉴



☎



확인



4 ㅓ

H

3

4 ㅓ

HI

8 ㅓ

 
HIT



문자를 입력하려면 (계속)

(24)) 가

특수문자 입력 방법

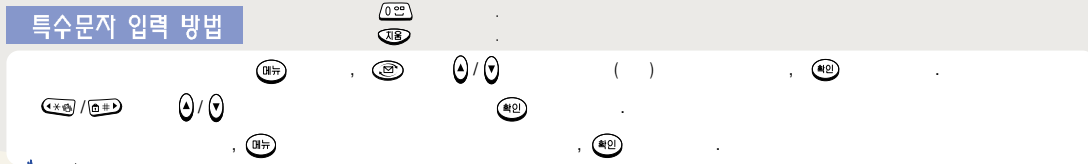


숫자 입력 방법




저장된 전화번호를 모두 지우려면

 가

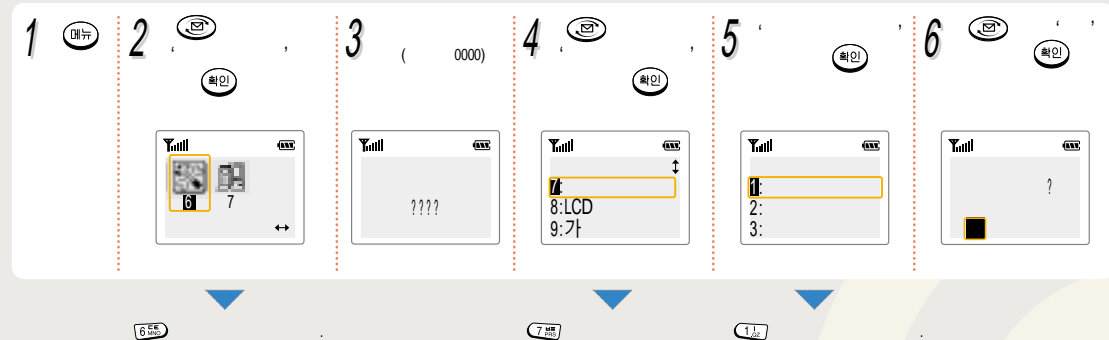



 1 (33 ~ 35) **2** **3** **4** , ‘ ’ , ‘ ’ , ‘ ’



수정 선택시



가 2

지음

24 ~ 27

$$\cdot (22)$$


확인 , 종료 ①

추가 선택시



1

4

4

50

•



가

한인, 한국

삭제 선택시

 
 


가

종료 ①



그룹 이름을 편집하려면

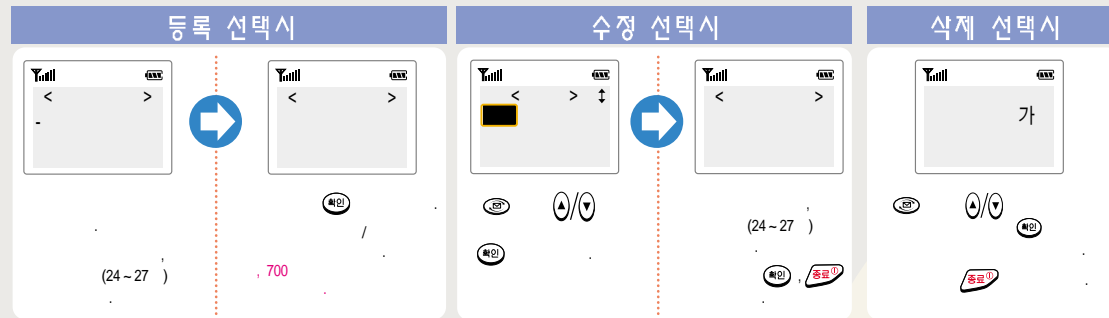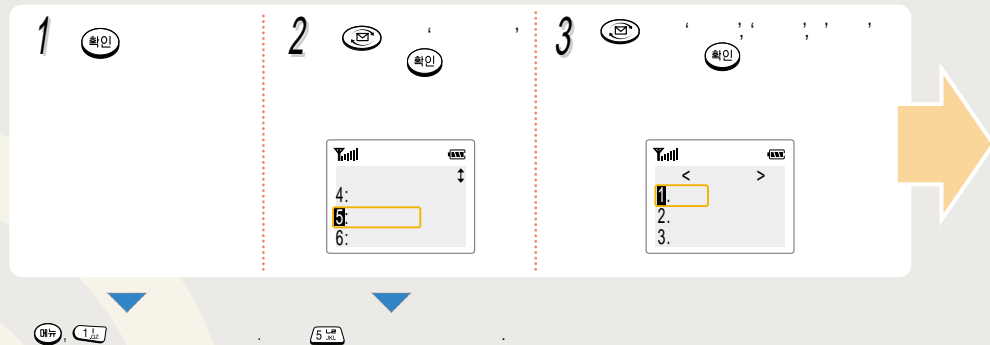


가 / (80) 가



저장된 전화번호를 찾아 전화하려면

. (66)

 그룹으로 찾기

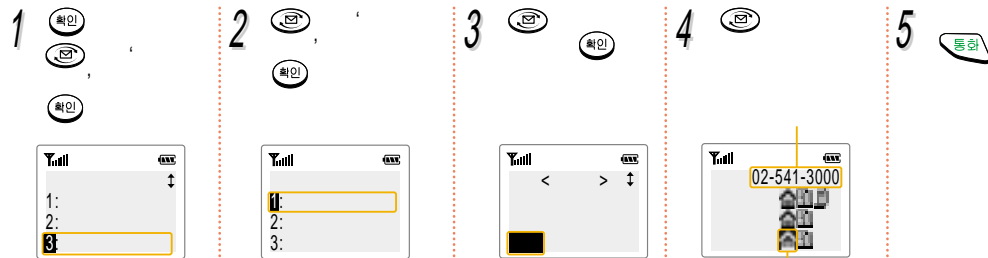


가 가
가 매뉴 ' 가 ' 지움 확인 . 가



4 8

 이름으로 찾기

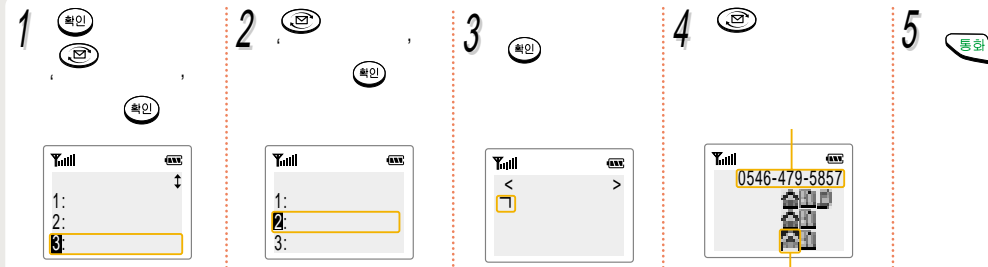

‘ 7 ’ ‘ 7 ’

(24 ~ 27)

 
. (21~23



저장된 전화번호를 찾아 전화하려면 (계속)

번지로 찾기

(66)

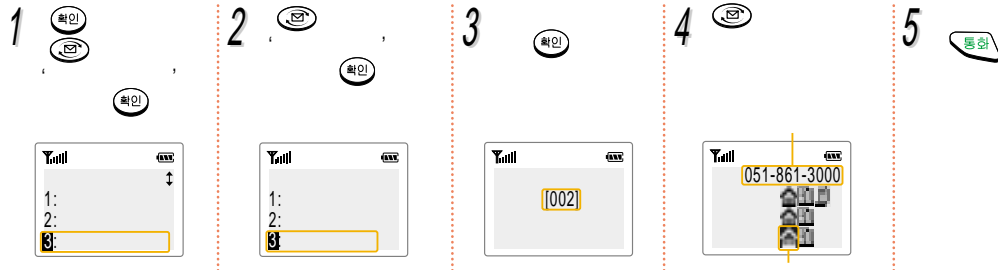

메뉴, 1, 3 DEF

3 DEF

지움

확인

가

메뉴

가

지움

확인

(21~23)

 


최근에 통화한 전화번호로 다시 걸려면

10

최근에 발신한 번호로 통화하려면

(66)

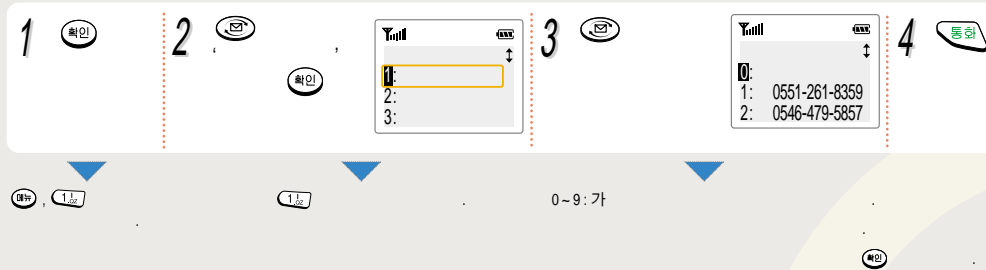

메뉴, 1, 2

1, 2

0~9:가

확인

최근 발신한 번호를 모두 지우려면



(0000)



최근에 수신한 상대방 전화번호로 다시 걸려면

가 10

80

최근에 수신된 번호로 통화하려면

1 2 3 4

1: 0551-261-8359
2: 0546-479-5857
3:

최근 수신된 번호를 모두 지우려면

(0000)



원터치 다이얼 기능 (번지로 간단하게 전화걸기)

가 . (22)

000~009번지에 저장된 경우

010~199번지에 저장된 경우

) 000
007

) 10
123



국번없이 전화 걸기

(200)

(10)

4

1 4 2 3

 
6 0 2 -
5 4 1 - 3 0 0 0

6 0 5 1 -
8 6 1 - 3 0 0 0



자동응답 기능


(, , 가)

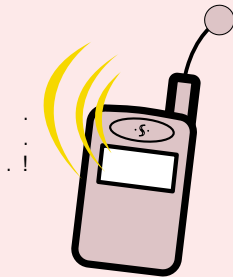

자동응답 기능을 설정하려면

가

 가

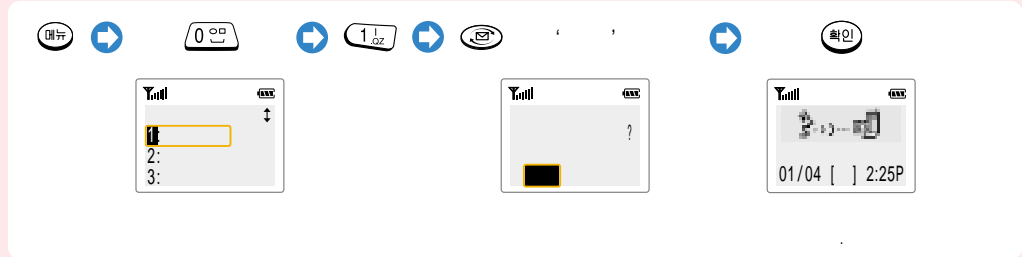

자동응답 기능을
해제 하려면



 
가





자동 응답 인사말을 선택하려면

가

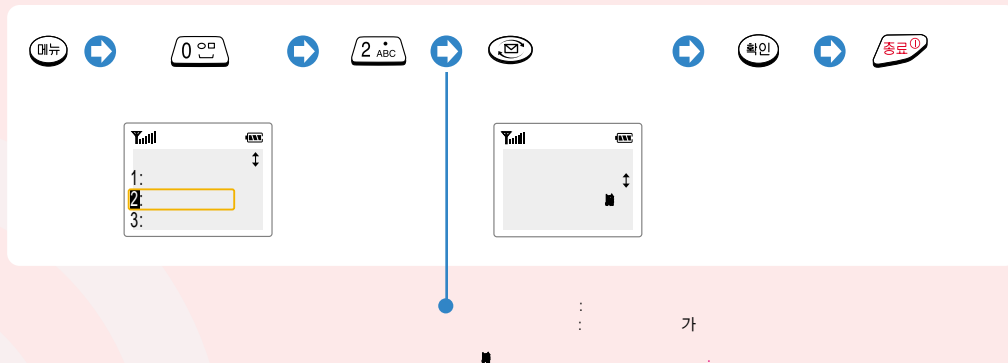


자동 응답 인사말을 직접 만들려면

가

(66)

 자동 응답 인사말을 녹음하려면



내가 만든 인사말을 들어보려면



내가 만든 인사말을 지우려면





메시지를 남기는 상대방 음성을 들으려면

메뉴 → 0 인 → 4 GH → [음성 메시지 아이콘] → 확인 → 종료 ①

Y.ull

4: [선택된 항목]

5:

0:

Y.ull

[음성 메시지 아이콘]

해제 방법 메뉴 → 0 인 → 4 GH → [음성 메시지 아이콘] → 확인 → 종료 ①



착신 시간을 선택하려면

메뉴 → 0 인 → 5 JKL → [음성 메시지 아이콘] → 확인 → 종료 ①

Y.ull

4:

5: [선택된 항목]

0:

Y.ull

5

5 : 5
10 : 10
가



상대방이 남긴 메시지를 재생/삭제하려면

8

(66)

녹음된 메시지를 들으려면

메뉴 → 0 인 → 0 인 → 1 .oz → 확인

가



가

녹음된 메시지를 지우려면

한 개 지우기 : 메뉴 → 0 인 → 0 인 → 2 ABC → 확인

가

확인

모두 지우기 : 메뉴 → 0 인 → 0 인 → 3 DEF → 확인



전자수첩기능

D-DAY

D-DAY

D-DAY



Anycall
응응편

 


스케줄 관리 기능


20

3

스케줄을 등록하려면

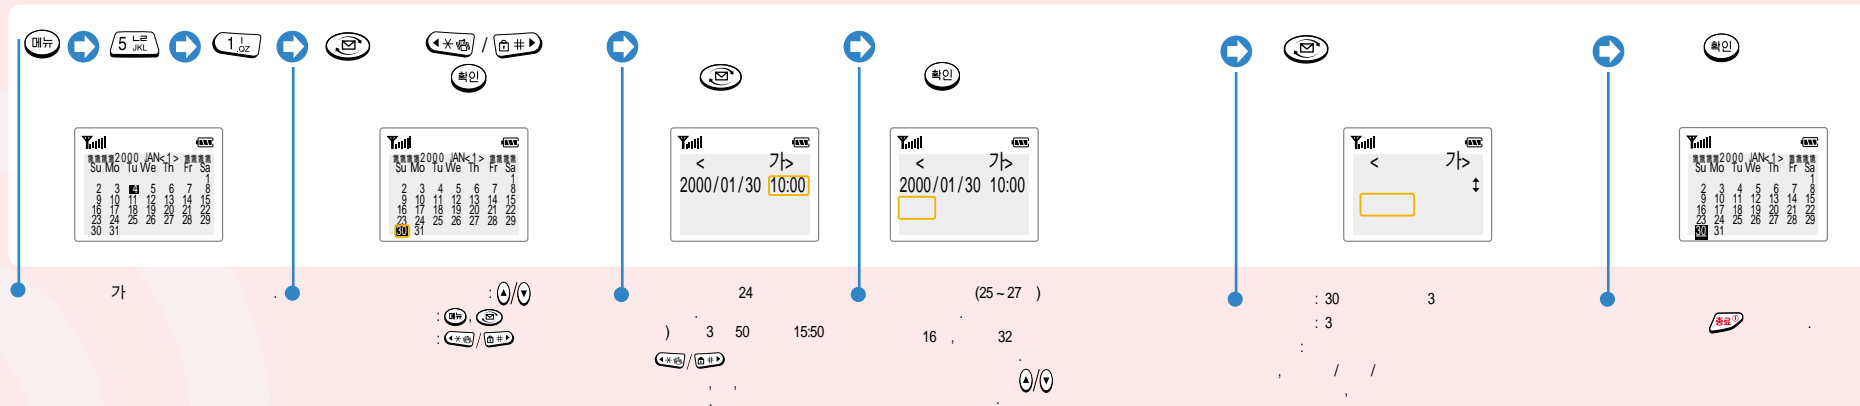

 (66)

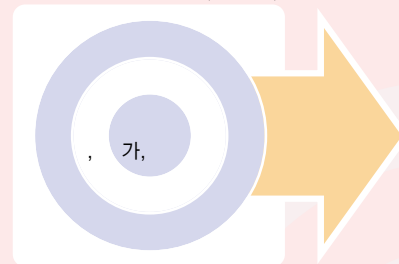


Amycall
응용편




스케줄 관리 기능 (계속)

 스케줄을 확인하거나 수정/추가/삭제하려면

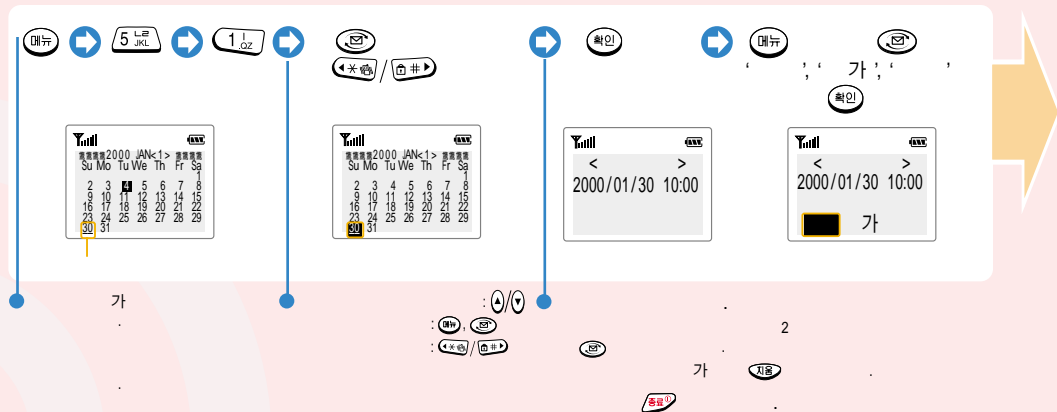


49

 수정 선택시




(47 ~ 48)

 추가 선택시

가
가
(47~48)

 삭제 선택시

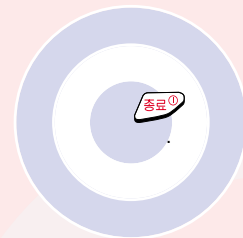

Ancall
6/60평

50

 


할일 관리 기능

20

할일을 등록하려면

. (66)

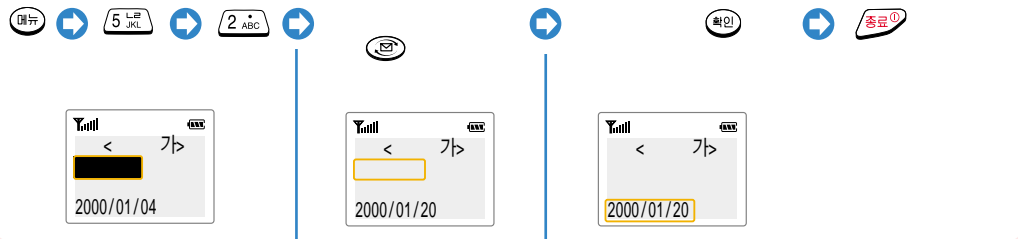


(24 ~ 27)
(16 ,
32 가)



할일을 보거나 수정/추가/삭제하려면

 . (66)

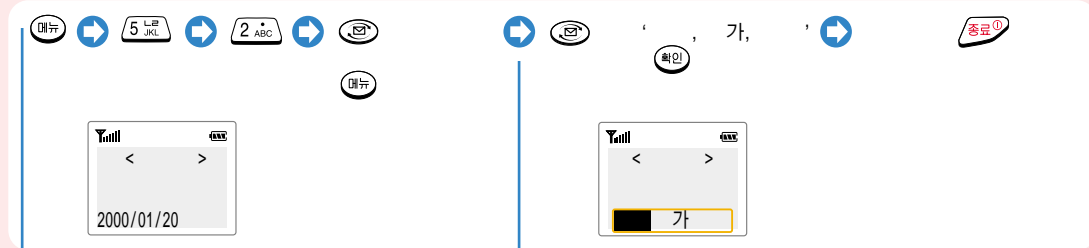


가 (51)






 전자계산기 기능

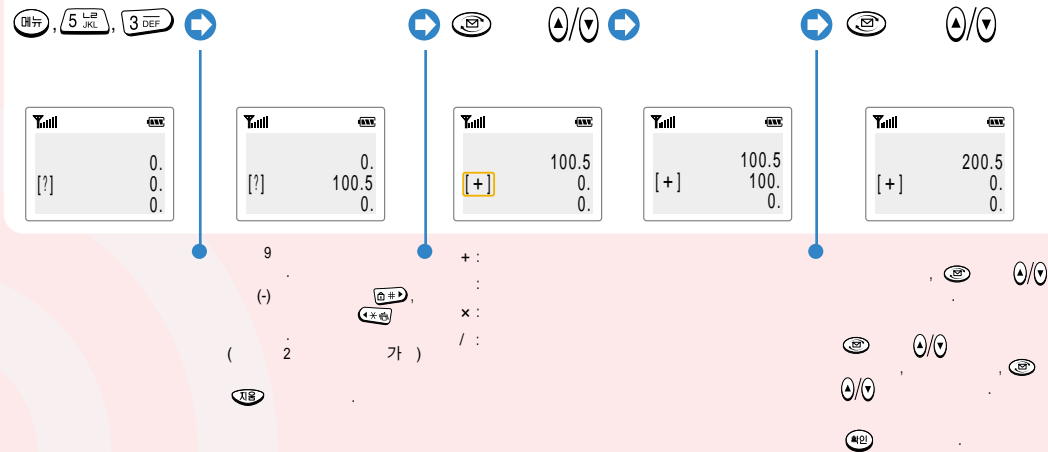

현재 시각을 설정하려면

 가

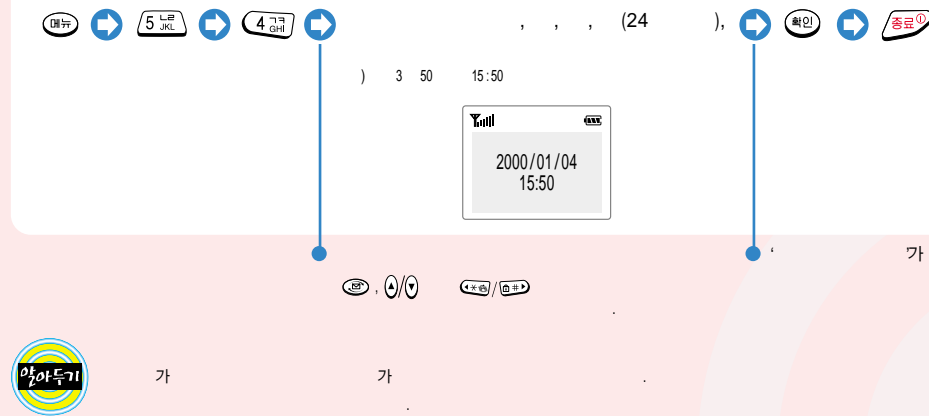

가

가



 
알람을 설정하려면

가 가

모닝콜 설정방법

가


가

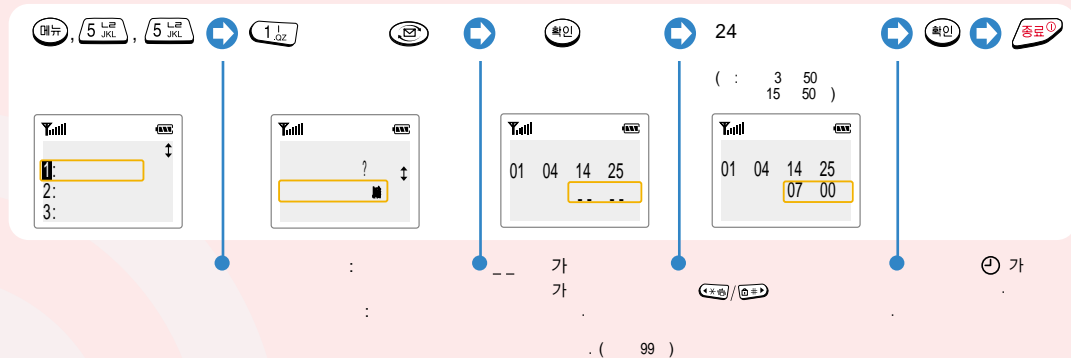

모닝콜 해제방법



 알람 설정방법

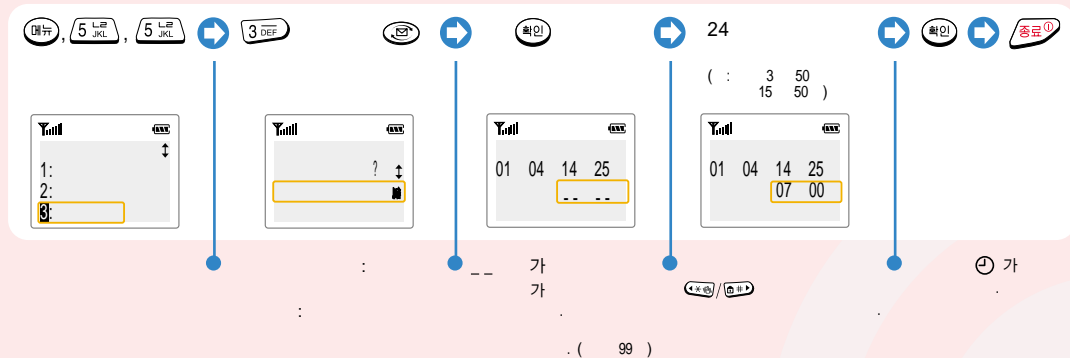

알람 해제방법





알람을 설정하려면 (계속)

알람 멜로디 설정하기



3

가



3



세계의 현지 시각을 확인하려면

가



40개 도시의 현지 시각을 볼 수 있습니다.

LA,

 


D-DAY 기능

D-DAY 5


D-DAY를 등록하려면

(66)

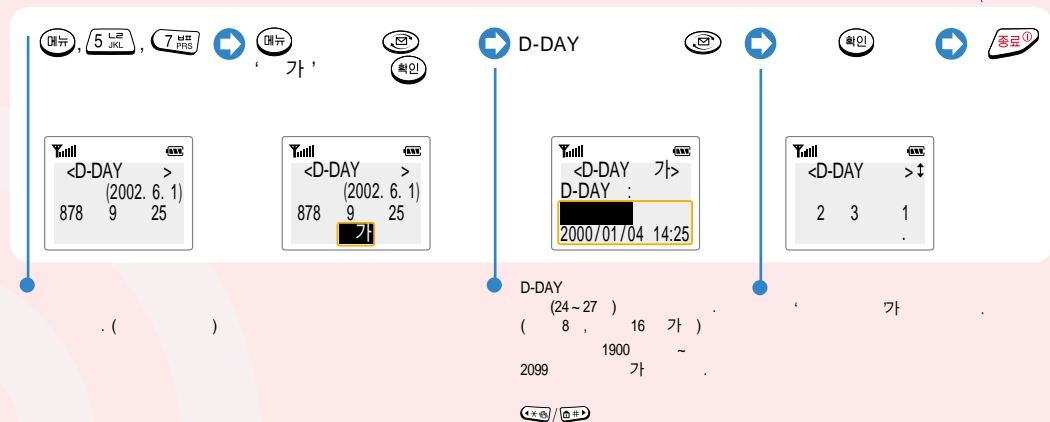

D-DAY를 확인하거나 수정/추가/삭제하려면


 
(66)

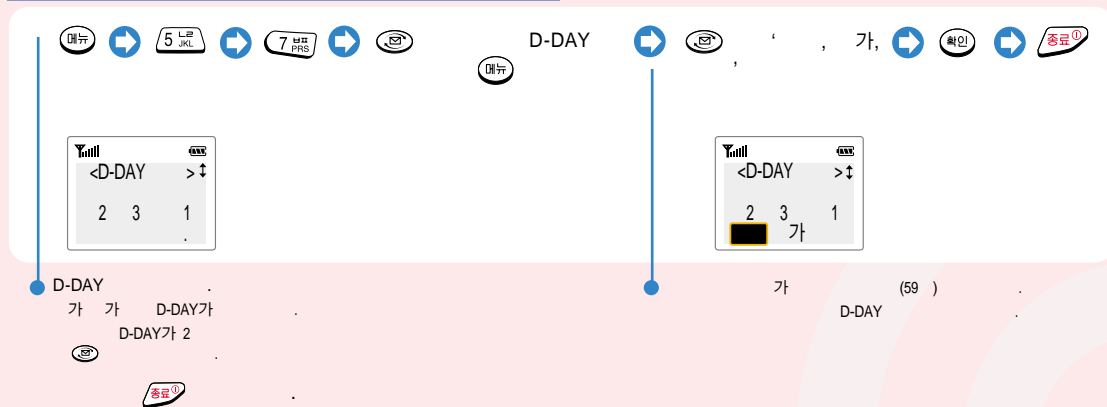




게임 기능

  가

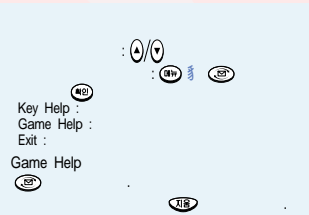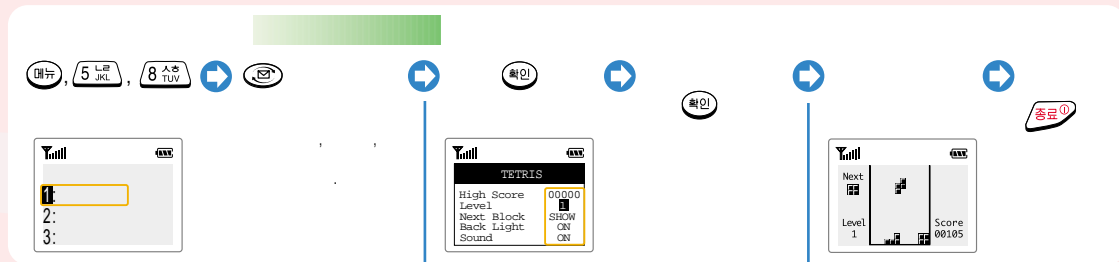

High Score : 가
Level() : 1~9
Next Block() :
SHOW(), HIDE()
Back Light() : ON(), OFF()
Sound() : ON(), OFF()

 1. / 3 DEF
2. APO
5. SHL
지움
확인
10

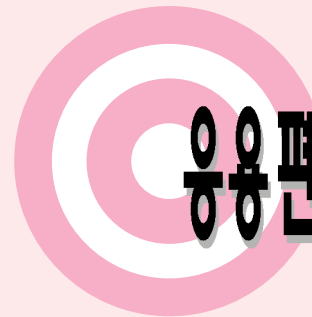

잠금기능

가

(:119)

가



 


비밀번호를 바꾸려면

'0000'




가 가 !

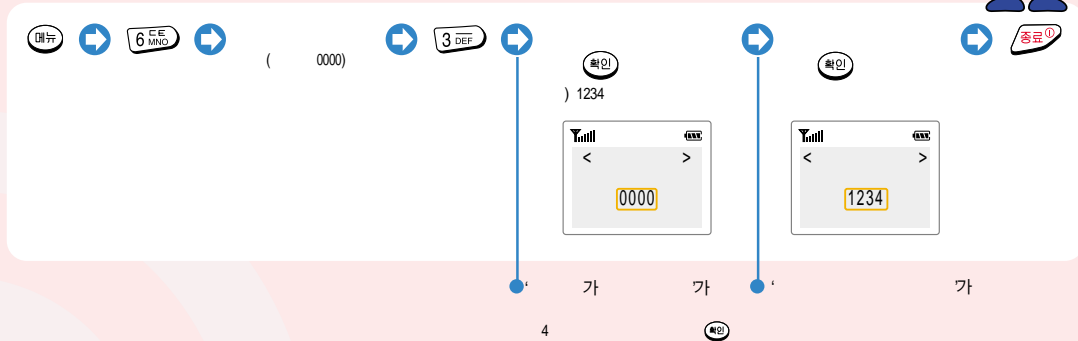

다른 사람이 휴대폰을 사용할 수 없게 하려면 (자동잠금)

(:119) 가

 (' ')

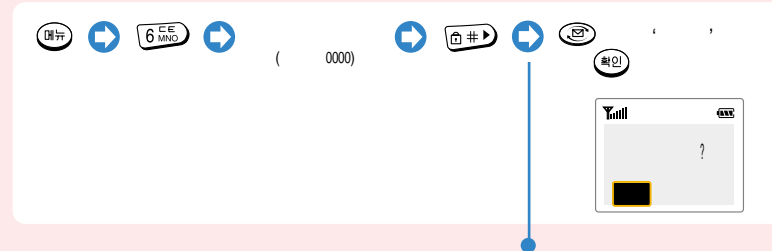

자동잠금 설정 표시



'아아두기'

'가 #'

'가'



기타 사용제한 방법

가

메뉴 → 6 DE MNO → (0000) → 6 DE MNO → 1 I.OZ → [Envelope Icon] → 확인 → 종료①

[Phone Screen Mockup: ?]

가 가 가

메뉴 → 6 DE MNO → (0000) → 6 DE MNO → 2 ABC → [Envelope Icon] → 확인 → 종료①

[Phone Screen Mockup: ?]

002) (:001, 가

메뉴 → 6 DE MNO → (0000) → 6 DE MNO → 3 DEF → [Envelope Icon] → 확인 → 종료①

 
 
[Phone Screen Mockup: ?]

가 , D-DAY

메뉴 → 6 DE MNO → (0000) → 6 DE MNO → 5 LJK → [Envelope Icon] → 확인 → 종료①

[Phone Screen Mockup: ?]

휴대폰 통화는 이렇게 이루어집니다

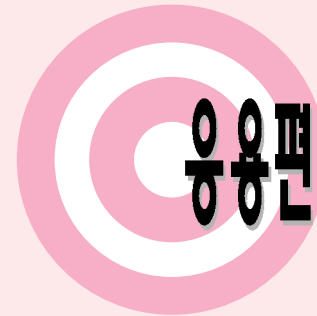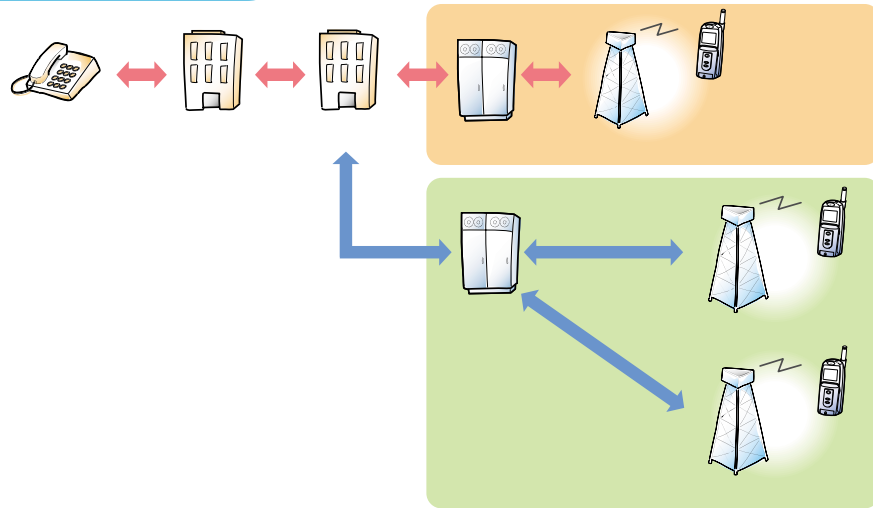

편리기능

가 / ! !
가 ? ? !

EVRC란?

Enhanced Variable Rate Codec

 
EVRC

가




자주 사용하는 지역번호를 누르지 않고 통화하려면 (지역번호 자동다이얼 기능)

설정방법

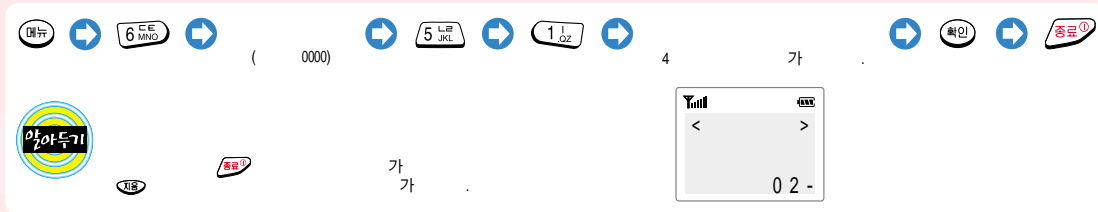

해제방법

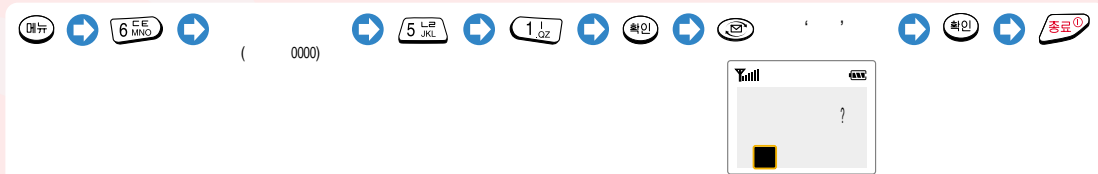 


국제전화를 선택하려면

02

가

 (66)

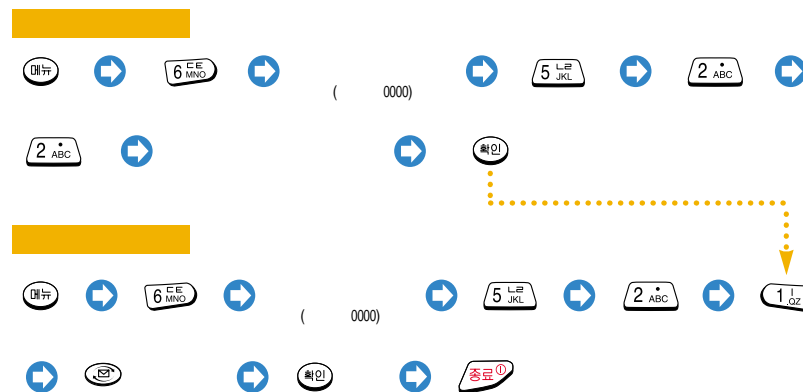




휴대폰에 자기이름을 입력하려면

8

 16

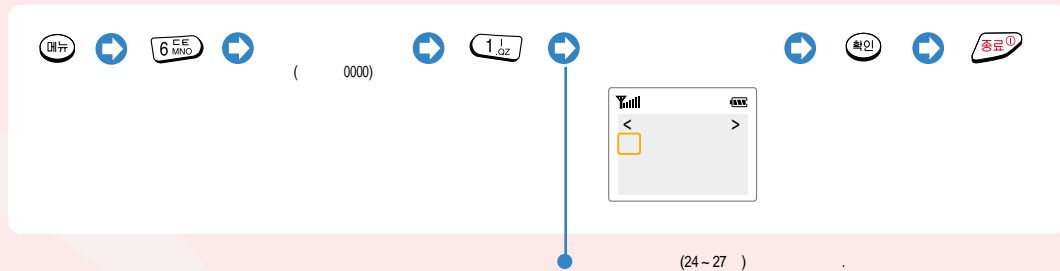

(24 ~ 27)



 
전자식 다이얼 기능

(ARS)

가

메모리를 이용한 전자식 다이얼

. (66)



포즈를 이용한 전자식 다이얼 (포즈란? 일종의 잠시 멈춤시간)

(포즈란? 일종의 잠시 멈춤시간)



(ARS)

 
. (79

)



녹음기로 사용하기

통화내용 녹음하기 (통화중예)




1

가 가



가

 주변소리 녹음하기 (메모 녹음)



1

가 가



가

 
녹음된 내용 듣기



녹음된 내용 한개씩 지우기



녹음된 내용 모두 지우기

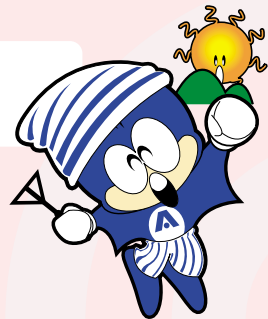



통화중 편리기능


기 능	설 정 방 법
가	
가	
가	



기타 편리기능

기 능	확 인 방 법
(66)	

기능	설정 방법
가	
가	
가	
가	

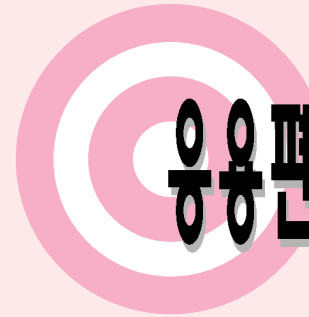 

선택기능

가
가
가

?

!

!

!





선택기능

기 능	설정 또는 해제방법 (차례대로 누르세요)
(' ,) 가 , , , , , ,	<div> <div> <div>메뉴</div> <div>→</div> <div>3 DEF</div> <div>→</div> <div>4 GH</div> <div>→</div> <div>☐</div> <div>,</div> <div>,</div> <div>→</div> <div>확인</div> <div>→</div> <div>종료①</div> </div> <div> <div>DTMF</div> <div>?</div> <div></div> </div> </div>
(' ,) 가 , , 가 ()	<div> <div> <div>메뉴</div> <div>→</div> <div>3 DEF</div> <div>→</div> <div>5 JKL</div> <div>→</div> <div>☐</div> <div>,</div> <div>,</div> <div>→</div> <div>확인</div> <div>→</div> <div>종료①</div> </div> <div> <div></div> <div>?</div> <div></div> </div> </div>

기 능	설정 또는 해제방법 (차례대로 누르세요)
(' ,) 가 , , 가 ()	<div> <div> <div>메뉴</div> <div>→</div> <div>3 DEF</div> <div>→</div> <div>6 MNO</div> <div>→</div> <div>☐</div> <div>,</div> <div>,</div> <div>→</div> <div>확인</div> <div>→</div> <div>종료①</div> </div> <div> <div></div> <div>?</div> <div></div> </div> </div>
(' ,) 가 , , 가 ()	<div> <div> <div>메뉴</div> <div>→</div> <div>6 MNO</div> <div>→</div> <div>(0000)</div> <div>→</div> <div>6 MNO</div> <div>→</div> <div>4 GH</div> <div>→</div> <div>☐</div> <div>,</div> <div>,</div> <div>→</div> <div>확인</div> <div>→</div> <div>종료①</div> </div> <div> <div></div> <div>?</div> <div></div> </div> </div>


기능	설정 또는 해제방법 (차례대로 누르세요)
128 X 64 Pixel PC 가 CD-ROM (113)	<p>메뉴 → 6 MNO → (0000) → 2 ABC →</p> <p>☐ SPEED 011, 1, 2, 1, SPEED 011 → 확인 → 종료 ①</p>
5 00 8 00	<p>메뉴 → 6 MNO → (0000) → 8 TUV → 1 QZ →</p> <p>☐ 1: 8, 2: 20, 3: 1: 8 → 확인 → 종료 ①</p>

기능	설정 또는 해제방법 (차례대로 누르세요)
	<p>메뉴 → 6 MNO → (0000) → 8 TUV → 2 ABC →</p> <p>☐ 00 ~ 39 → ☐ : 20 → 확인 → 종료 ①</p>



음성다이얼

 . (20)
 . (20)
 . (66)

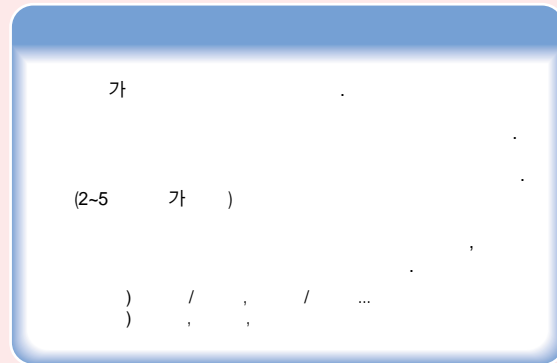




음성으로 이름을 등록하려면

메뉴 → 4 GH → 1 _OZ → → 확인

가



아래와 같은 안내방송이 나와요!

→

→

→ 20



음성으로 전화하려면 (자동음성다이얼 기능)

자동음성다이얼 설정하기

메뉴 → 4 GH → 5 JKL → → ? → 확인 → 종료①



음성으로 전화걸기

지움 → → 종료①

가 !



등록한 음성 이름을 확인하거나 지우려면

등록한 음성 이름을 확인하려면

[메뉴] → [4 GHI] → [2 ABC] → 가

 
등록한 음성 이름을 지우려면

[메뉴] → [4 GHI] → [3 DEF] → [확인] → 종료①


[메뉴] → [4 GHI] → [4 GHI] → [확인]



핸즈프리에 연결하여 사용하려면

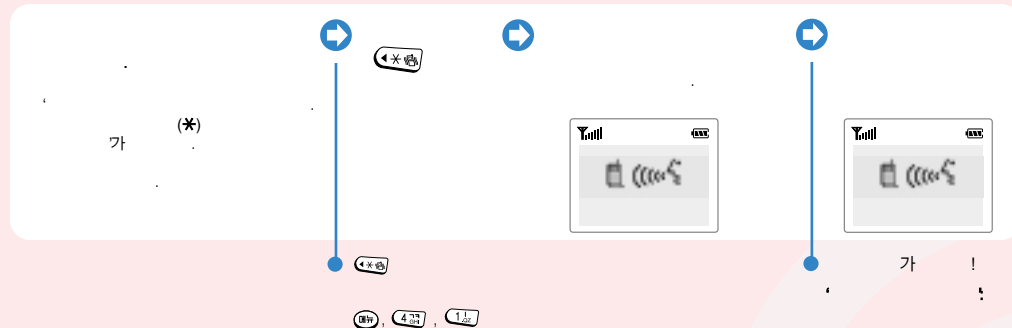

MEMO

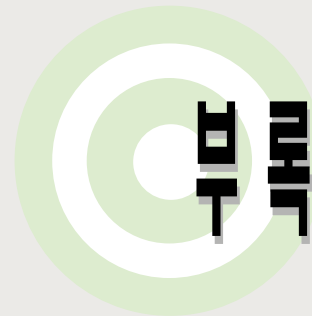 

부가서비스

가 가

 
50 가 가 가
(: , ' 114

' 114



이 서비스는 휴대폰을 이용해 호출 및 문자, 음성 메시지를 수신 및 발신 할 수 있는 서비스입니다.

수신함 관리 기능

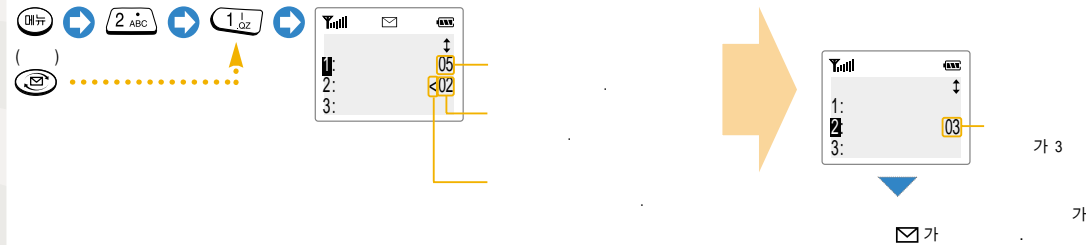





메시지 내용표시 설정/해제방법



2.

가

    94 ~ 95



가

가

가

 


가


!

가

)




25%

 

가



 수신된 음성 메시지를 확인하려면



가

수신된 문자 메시지를 보려면

메뉴, 2 ABC, 1 QZ, 확인

01 025413000
02 0515503366
03 0537543366

02
0515503366
01/04 08:25P

가

통화, 종료, 확인

수신된 메시지를 모두 지우려면

메뉴, 2 ABC, 1 QZ, 3 DEF, 확인

 
아름아두기

메뉴, 2 ABC, 1 QZ, 4 GHI, 확인, 종료


2 : 2
(, / /)

편지를 쓰려면

1.

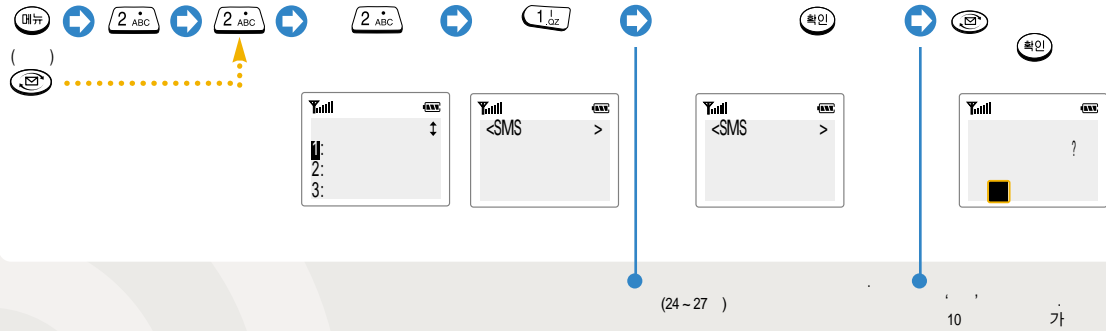

 2.

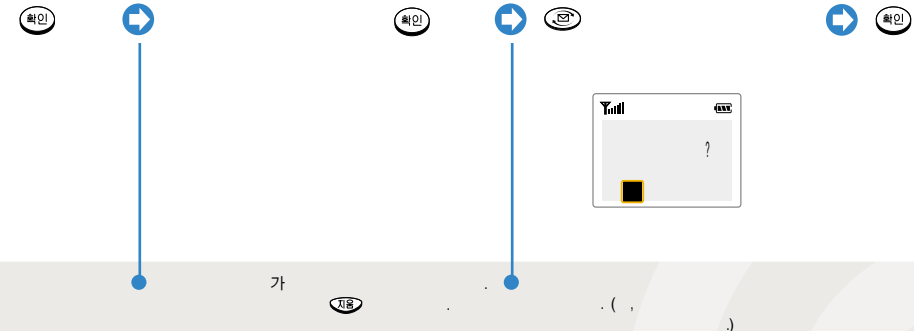

보관된 문장을 선택하여 보내려면



보관된 문장을 지우려면



 
전송 속도를 선택하려면



휴대폰에 호출하려면




저장된 발신 메시지를 확인, 지움 또는 재발신하려면

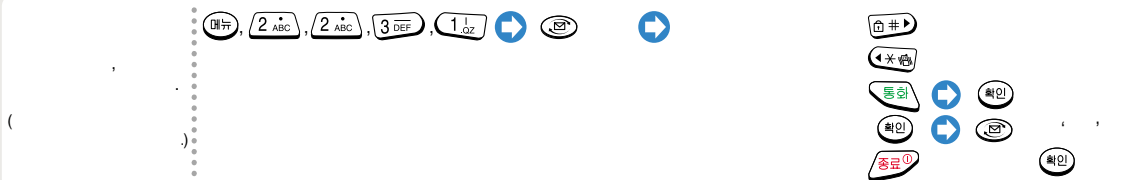


저장된 발신 메시지를 모두 지우려면



 n.TOP 서비스에 연결하려면

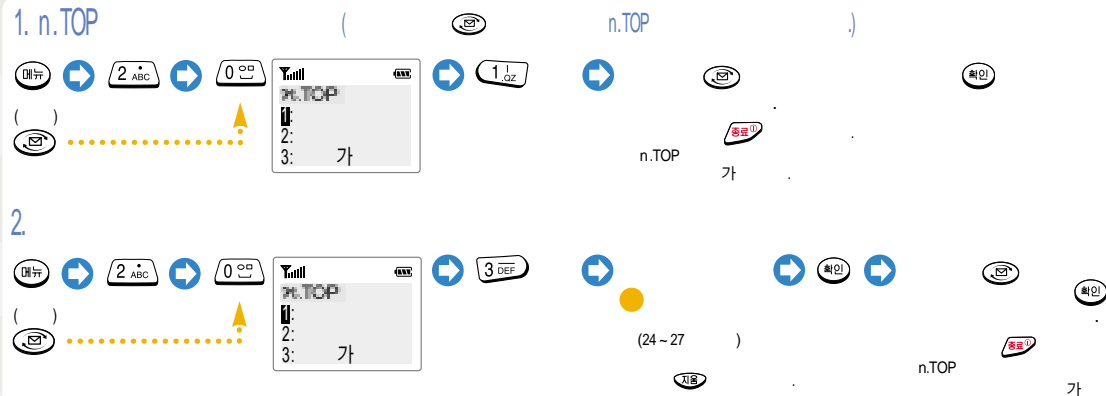


즐거찾기에 메뉴를 추가하려면

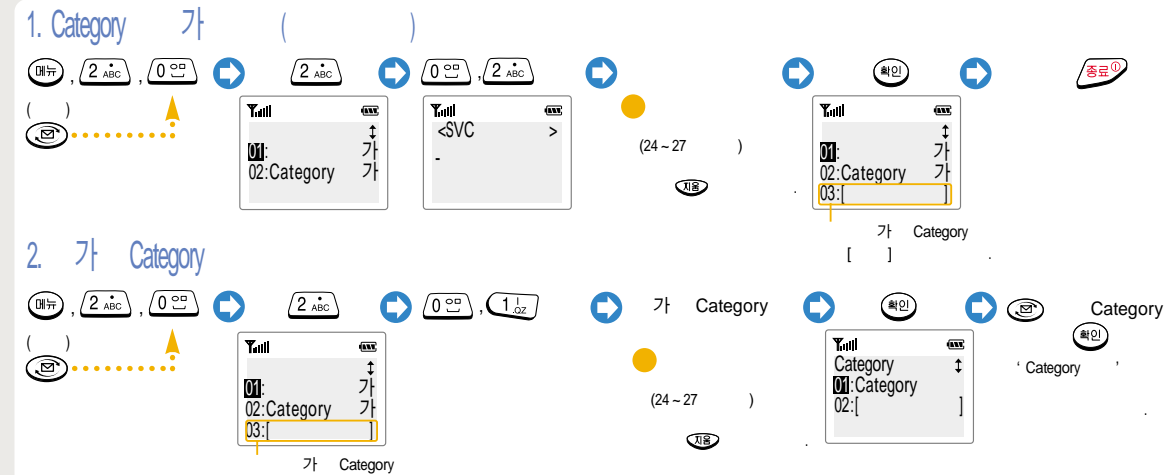 


부록 무선 데이터 통신 기능

- 이 서비스는 별매품인 데이터 통신 케이블을 구입하여야 이용 가능합니다.
- 컴퓨터 환경설정 및 기타 자세한 내용은 데이터 통신 케이블 구입시 첨부되는 사용설명서를 참조하세요.

 
무선 데이터 통신용 착신음 벨소리를 선택하려면

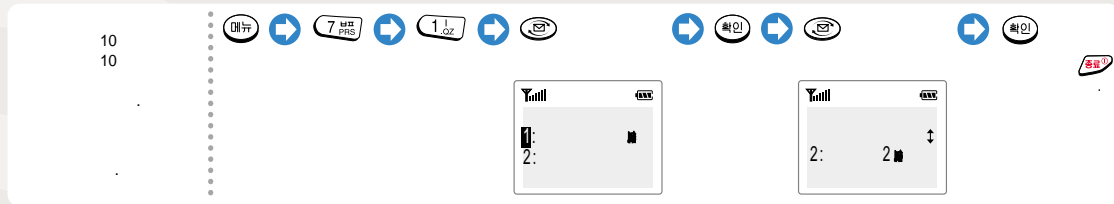

무선 데이터 통신용 자동작신 설정을 선택하려면

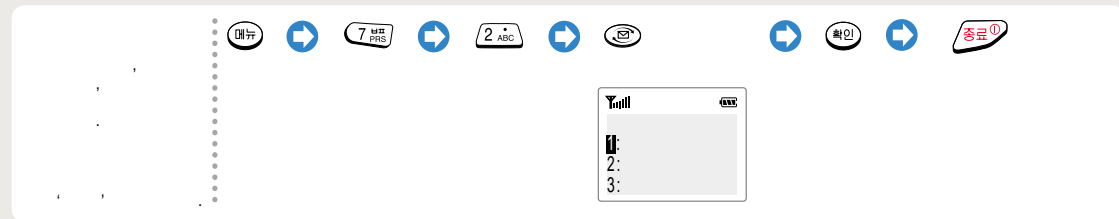 


고속데이터 선택

 


이 서비스는 휴대폰에서 벨이 울려도 받지 않을 경우 안내 음성이 들립니다. 이때 전화를 건 사람이 연락받을 전화번호를 누른 후 별(※)표를 누르면 휴대폰 화면에 전화가 걸려온 시각과 연락받을 전화번호가 표시(최대 10개)되는 기능입니다.

 수신시 화면 표시



수신 내용을 확인하려면

 

수신 내용이 여러개일 경우



수신 내용을 지우려면



 
부록 넘버 플러스 서비스 기능




- 1.
- 2.
- 3.
- 4.

(SMS)
(80)


휴대폰에 넘버 플러스를 입력하려면

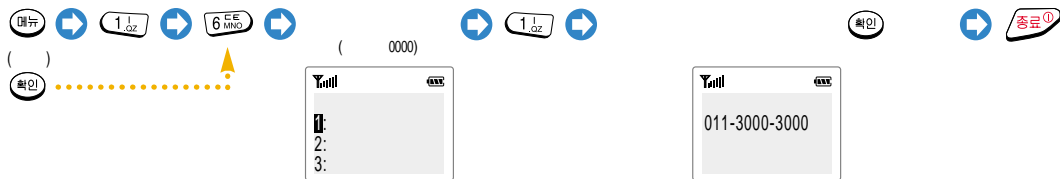

넘버 플러스용 벨소리나 멜로디를 선택하려면

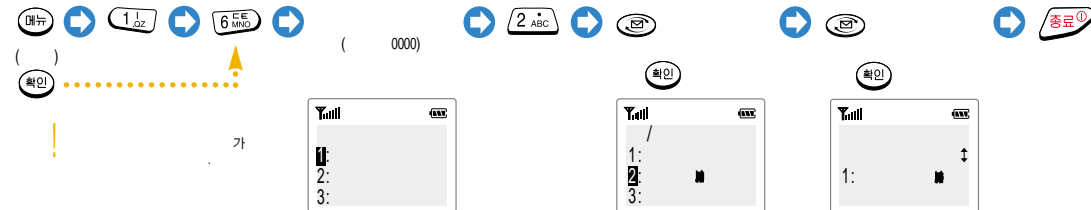 

휴대폰에 입력한 넘버 플러스를 삭제하려면

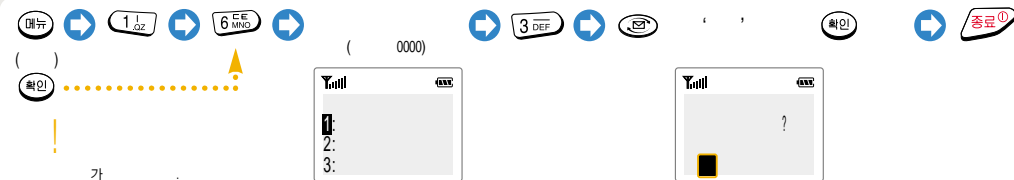 

넘버 플러스로 전화가 걸려오면

가
가
가
가



부록 국제전화 로밍 서비스 기능

 
가 가

MEMO

PC링크를 이용한 멜로디 및 이미지 추가 기능

PC , PC , PC , PC , SMS
(,)
PC , CD-ROM , PC , CD-ROM 가


화면구성 및 기능

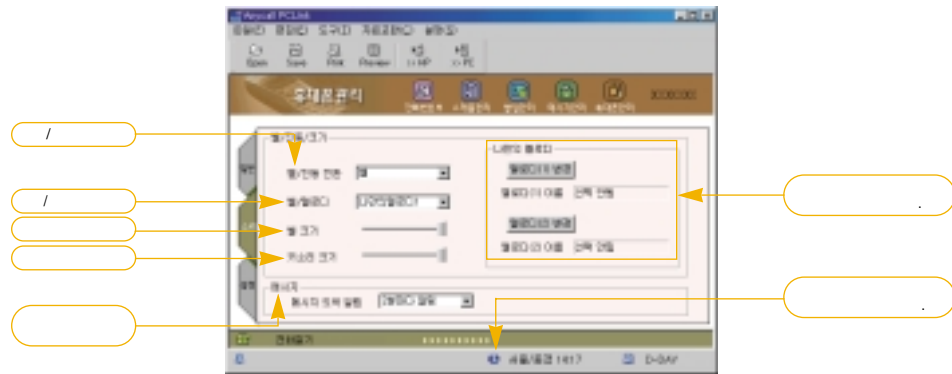


700 서비스를 이용한 벨/멜로디 추가 기능

(SMS) 가

 700 서비스로 벨/멜로디를 다운로드 받으려면

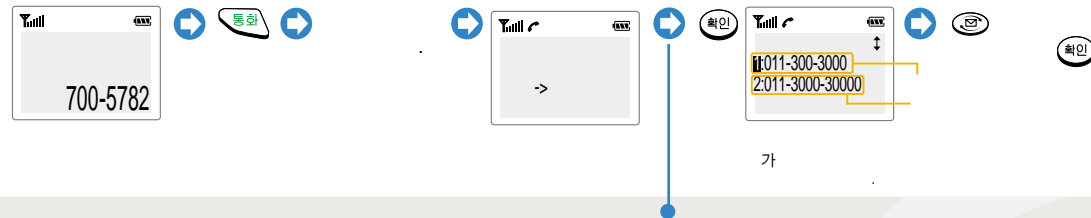

다운로드 받은 벨/멜로디를 확인하려면

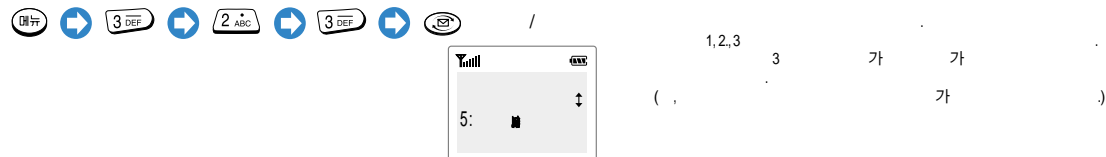 



고장 같단가요?

증상

조치

가 (7)

‘☎’ 가

가 2

‘☎’

가

()

증상

조치

(?)

(19)

가

 
/ / (14)

 
가

가 가

가

기능 메뉴 요약표

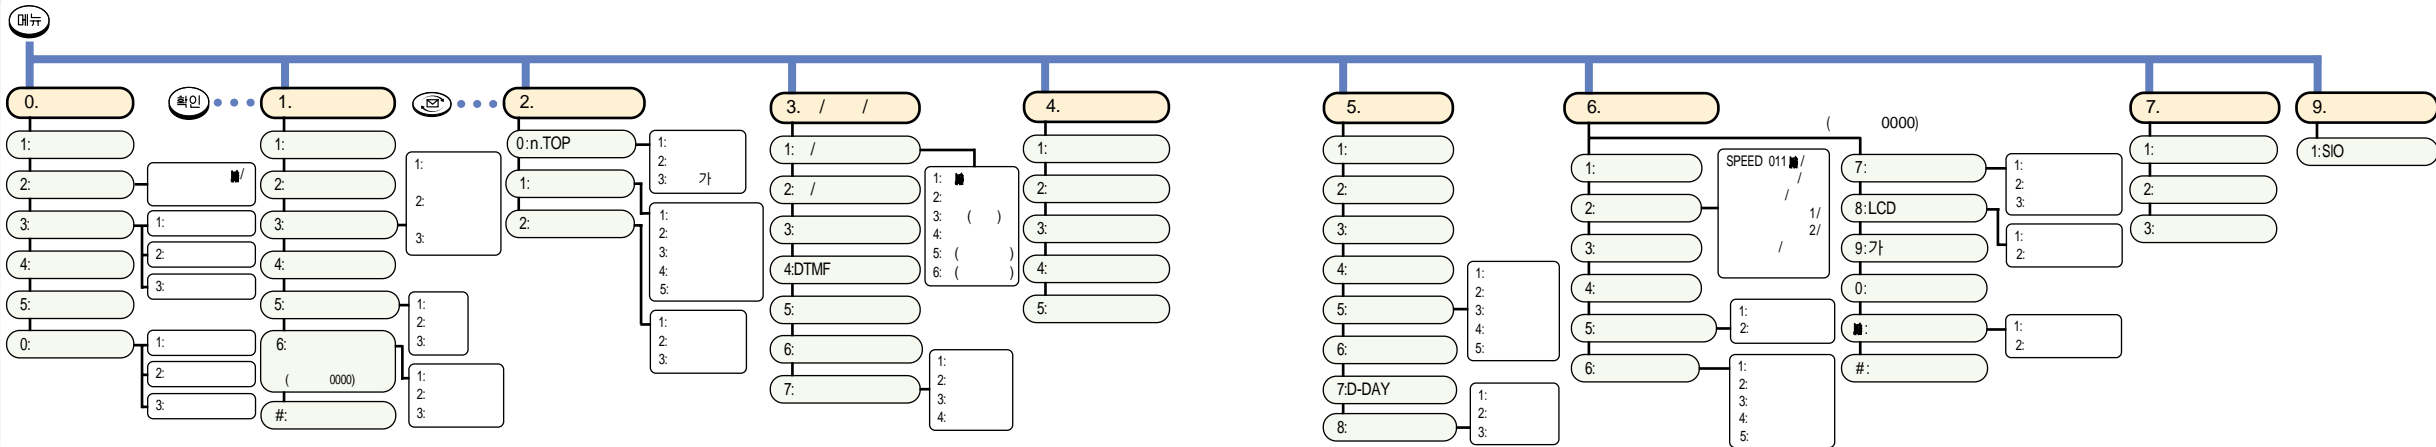


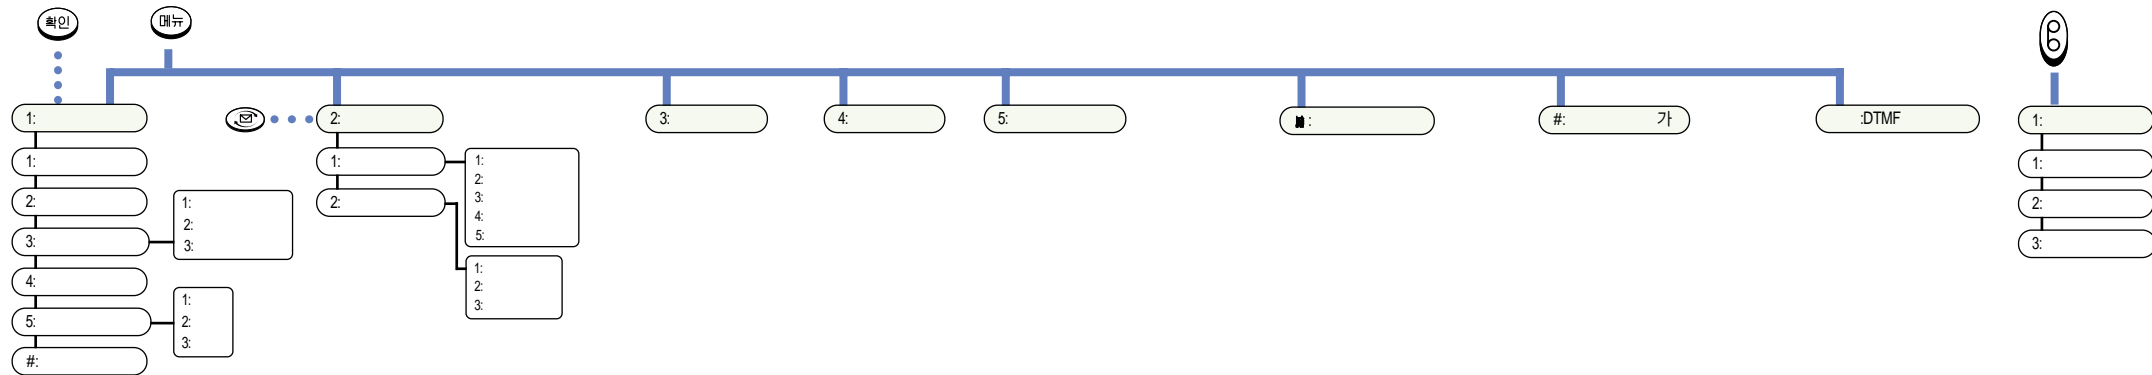



안전을 위한 주의사항

 전 원 관 련



가



기 타

 


가



부록 별매품


차량용 핸즈프리 박스 (HF B22D)




차량용 거치대 (CRD18)



 
차량용 충전 키트 (CLC18)

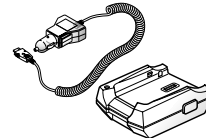


데이터 통신 케이블 (PCB010S8BK)

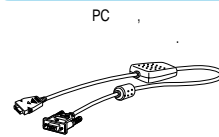 


이어마이크 폰 (EMP20)

 

여행용 충전기 (TCHO10KBK)

 

PC 링크용 CD-ROM

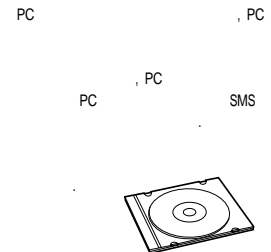 

배터리






규격 및 특성

	(TX) : 824.64 ~ 848.37 MHz
	(RX) : 869.64 ~ 893.37 MHz
	± 300 Hz
(mm)	: 107(L) × 42(W) × 19.9(H) : 107(L) × 42(W) × 24 (H)
(± 1g)	: 92g : 115g
	300 mW
	-20 ~ + 50
	0% ~ 95%



 휴대폰 덮개가 빠졌을 때

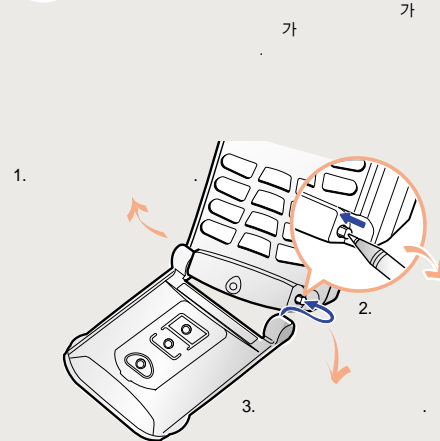

서비스에
대하여

()

14

1 ()

10		
1		
가	3	
	4	
가	() 가	가
가	() 가	가 10% 가

1
6
5

		SCH-A7600
	SERIAL NO.	

(가 가)

1	2
---	---

가

(, ,) (, ,)

삼성전자



	메뉴	6.음성	1.가	7.문자	1.가	2.확인	3.확인
	메뉴	1.가	1.가	1.가	1.가	1.가	1.가
/	메뉴	6.음성	1.가	1.가	1.가	1.가	1.가
/	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가
	메뉴	6.음성	1.가	1.가	1.가	1.가	1.가
/	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가
	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가
	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가
	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가
	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가

	메뉴	6.음성	1.가	7.문자	1.가	2.확인	3.확인
	메뉴	1.가	1.가	1.가	1.가	1.가	1.가
/	메뉴	6.음성	1.가	1.가	1.가	1.가	1.가
/	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가
	메뉴	6.음성	1.가	1.가	1.가	1.가	1.가
/	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가
	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가
	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가
	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가
	메뉴	4.음성	1.가	1.가	1.가	1.가	1.가

Menu Map

외국인을 위한 페이지 (for Foreigner)

The following illustration shows the menu structure available and indicates the number assigned to each option. To access menu mode, press the soft key indicated by the text '메뉴' (Menu).

0. Autoanswer

- 0-1. Set answering mode (Set/Cancel)
- 0-2. Greeting selection (Prerecorded greeting / Your greeting)
- 0-3. Your greeting (1. Record/2. Play/3. Delete)
- 0-4. Listen during playback (Set/Cancel)
- 0-5. Ring count (1. 5 Second after / 2. 10 Second after / 3. Direct answering)
- 0-0. Recorded messages (1. Play/2. Delete one/3. Delete all)

1. Phonebook (확인)

- 1-1. Last numbers dialled
- 1-2. Last numbers received
- 1-3. Search a number (1. Recall by Group/2. Recall by name/ 3. Recall by memory location)
- 1-4. Add new entry
- 1-5. Group editing (1. Registration/2. Edit/3. Delete)
- 1-6. Number plus service (1. Registration number/2. Select ring type/ (Password required) 3. Delete number)
- 1-#. Own number display

2. Mail service (메일)

- 2-0. n.TOP (1. n.TOP connection/2. Bookmarks/3. Shortcut)
- 2-1. Message received (1. Voice messages/2. Text messages/ 3. Erase messages/4. Message alert/ 5. Message display on/off)
- 2-2. Message to send (1. Page phone/2. Write message/ 3. Message maintenance)

3. Alert type and volume

- 3-1. Alert type (1. Ring / 2. Vibration/3. Silence(lamp)/ 4. Vibration after ring/5,6. Ring(Getting louder/lower)
- 3-2. Ring type
 - 3-2-1. Alert (1~10)
 - 3-2-2. Melody (1~10)
 - 3-2-3. Registration melody (1~2: Record melody/ 3~4: Mine melody/5~7: 700 Melody)

Menu Map (Continued)

- 3-3. Ring volume
- 3-4. DTMF tone lenght (Short /Long)
- 3-5. Connect tone (Set /Cancel)
- 3-6. Disconnect tone (Set/Cancel)
- 3-7. Melody record(1. Record/2. Play/3. Delete one/4. Delete all)
- 4. Voice Dial
 - 4-1. Record
 - 4-2. Play Back
 - 4-3. Delete One
 - 4-4. Delete All
 - 4-5. Voice Mode (Set/Cancel)
- 5. Additional features
 - 5-1. Scheduler
 - 5-2. Job list
 - 5-3. Calculator

- 5-4. Set time
- 5-5. Alarm
 - 5-5-1. Set morning call (Every day /Week-days)
 - 5-5-2. Release morning call
 - 5-5-3. Set alarm (Every day on time /Only once)
 - 5-5-4. Release alarm
 - 5-5-5. Melody alarm (1~3. Melody/4. Vibration)
- 5-6. World time (40 City)
- 5-7. D-Day
- 5-8. Game (1. Tetris/2. Black Jack/3. Casino)
- 6. Personal information (*Password required*)
 - 6-1. Set name
 - 6-2. Initial screen type (Speed 011/Digital clock/None/My own image1/My own image2/Samsung/Olympic partner)
 - 6-3. Change password
 - 6-4. Call time display

- 6-5. Auto dial (1. Area code/2. International code)
- 6-6. Call barring
 - 6-6-1. Memory dial (Set/Cancel)
 - 6-6-2. Incoming (Set/Cancel)
 - 6-6-3. International (Set/Cancel)
 - 6-6-4. Received number display (View /Restriction)
 - 6-6-5. Private (Set/Cancel)
- 6-7. Erase number (1. Numbers stored/2. Numbers dialled/3. Numbers received)
- 6-8. LCD backlight
 - 6-8-1. LCD backlight (1. 8 Second /2. 20 Second 3. Always off)
 - 6-8-2. Brightness of display (0~39 Step)
- 6-9. NAM select
- 6-0. PIN check (Set/Cancel)
- 6-. Reset (1. All data/2. Only function)
- 6-#. Auto lock (Set/Cancel)

- 7. Data service
 - 7-1. Select ring type (1. Alert /2. Melody)
 - 7-2. Automatic receiving setup
 - 7-2-1. Automatic receiving release
 - 7-2-2. Modem Automatic receiving
 - 7-2-3. Fax Automatic receiving
 - 7-3. Speed data setup

- 9. System information
 - 9-1. SIO Mode

Record Menu ()

- 1. Play
- 2. Delete one
- 3. Delete all

Quick-Converting to Vibration

In addition , with a touch of a key , you can set the phone into the vibration mode at any time. Press and hold down .

In-Call Options

To access these functions during a call, press the soft key indicated by the text '  (Menu)'.

1. Phonebook ()

- 1-1. Last numbers dialled
- 1-2. Last numbers received
- 1-3. Search a number (1. Recall by Group/2. Recall by name
3. Recall by memory)
- 1-4. Add new entry
- 1-5. Group editing
- 1-#. Own number display

2. Mail service ()

- 2-1. Message received (1. Voice messages/2. Text messages/3. Erase messages/
4. Message alert/5. Message display on/off)
- 2-2. Message to send (1. Page phone/2. Write message/3. Message maintenance)

3. Switching microphone off(on)








































4. Muting (Sending) key tone

5. Sending own number








































 . Decrease of microphone Sensitivity

. Increase of microphone Sensitivity

. DTMF dialing

SCH-A7600 Quick Reference Card	
Function	Press in sequence
Alert Type	 ,  ,  , (choose),  , 
Ring Type	 ,  ,  , (choose),  , (choose),  , 
Ring Volume Speaker Volume	 ,  ,  , (choose),  , (choose),  , 
Autoanswer on/off	 ,  ,  , (choose),  , 
Using Speakerphone	(During conversation Flip open)  , (Hold) (During conversation Flip closed)  , (Hold)
Store in Memory	Phone number  , Name  , Memory location  ,  ,  , (choose)  ,  , (choose),  , 
Scan Memory	 ,  ,  ,  , (scan), To dial:  , 
Dial Memory Number	000-009: Press and hold the last digit only, 010-199: Press the first two digits briefly, and hold the last digit



SCH-A7600 Quick Reference Card	
Function	Press in sequence
Alert Type	 ,  ,  , (choose),  , 
Ring Type	 ,  ,  , (choose),  , (choose),  , 
Ring Volume Speaker Volume	 ,  ,  , (choose),  , (choose),  , 
Autoanswer on/off	 ,  ,  , (choose),  , 
Using Speakerphone	(During conversation Flip open)  , (Hold) (During conversation Flip closed)  , (Hold)
Store in Memory	Phone number  , Name  , Memory location  ,  ,  , (choose)  ,  , (choose),  , 
Scan Memory	 ,  ,  ,  , (scan), To dial:  , 
Dial Memory Number	000-009: Press and hold the last digit only, 010-199: Press the first two digits briefly, and hold the last digit



Function	Press in sequence
Erase Memory	[6 5 5], Password, [7 1 2], [1 2] (choose'), [Enter], [Enter]
Redial	[Enter], [1 2], [1 2], [Enter] (select a number to dial), [Enter]
Auto Lock on/off	[Enter], [6 5 5], Password, [6 1 2], [Enter] (choose), [Enter]
Manner Mode on/off	[Enter] (hold)
Change Password	[Enter], [6 5 5], Password, [3 1 2], New password, [Enter], (two times), [Enter]
Voice Mode on/off	[Enter], [4 3 2], [5 1 2], [Enter] (choose), [Enter]
Record Voice	[Enter], [4 3 2], [1 2], Say name, Phone number, [Enter]
Playback Recorded Voice	[Enter], [4 3 2], [2 1 2], Recorded names are played with phone number in the display
Delete One Recorded Voice	[Enter], [4 3 2], [3 1 2], select voice, [Enter]
Delete All Recorded Voices	[Enter], [4 3 2], [4 3 2], [Enter]

Function	Press in sequence
Erase Memory	[Enter], [6 5 5], Password, [7 1 2], [1 2] (choose'), [Enter], [Enter]
Redial	[Enter], [1 2], [1 2], [Enter] (select a number to dial), [Enter]
Auto Lock on/off	[Enter], [6 5 5], Password, [6 1 2], [Enter] (choose), [Enter]
Manner Mode on/off	[Enter] (hold)
Change Password	[Enter], [6 5 5], Password, [3 1 2], New password, [Enter], (two times), [Enter]
Voice Mode on/off	[Enter], [4 3 2], [5 1 2], [Enter] (choose), [Enter]
Record Voice	[Enter], [4 3 2], [1 2], Say name, Phone number, [Enter]
Playback Recorded Voice	[Enter], [4 3 2], [2 1 2], Recorded names are played with phone number in the display
Delete One Recorded Voice	[Enter], [4 3 2], [3 1 2], select voice, [Enter]
Delete All Recorded Voices	[Enter], [4 3 2], [4 3 2], [Enter]

Serial Number)가

1,000

가

57

가

347

가

3

가

4

가

(ESN : Electronics

1.

2.

1.

2.

가

()

Licensed by QUALCOMM Incorporated under one or more of the following Patents.

U.S. Patent No.

4,901,307

5,056,109

5,099,204

5,101,501

5,103,459

5,107,225

5,109,390